→ To proceed to this step, please first log in using the printer's service code, which you can find in the "additional training" / Service mode PIN section."



Step 2:



Step 3:

Remote Control-Panel															
	Connexion > Périphérique local														
	Code d'accès utilisateur													_	
	Code	Code d'accès utilisateur													
	Code d'accès de l'administrateur														
	Code	d'accès	service	7			1								
														_	
	2 8	k é		1			è	1-	ç	à)	-	←		
		а	z	е	r	t	у	u	i	0	р	٨	\$ *		
	Caps	q	s	d	f	g	h	j	k	1	m	ù	1		
	Û	<	w	х	С	v	b	n	,	;	:	1	123		
	Alt @								ОК		Annuler <u>9</u>			4	


Step 4:




Step 5:




Step 6:

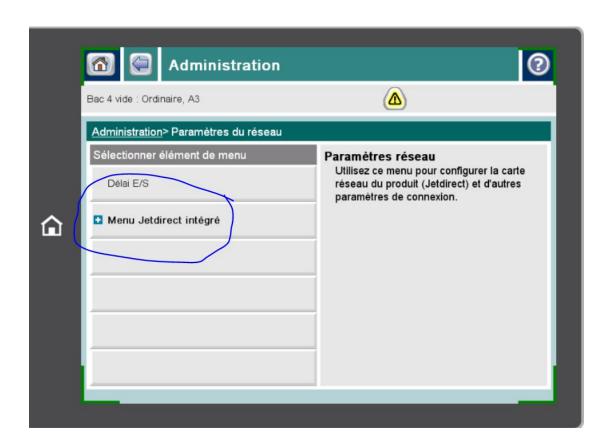


Step 7:

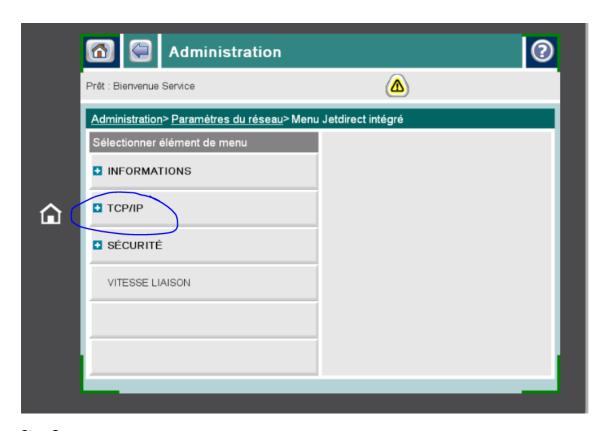

Step 8:

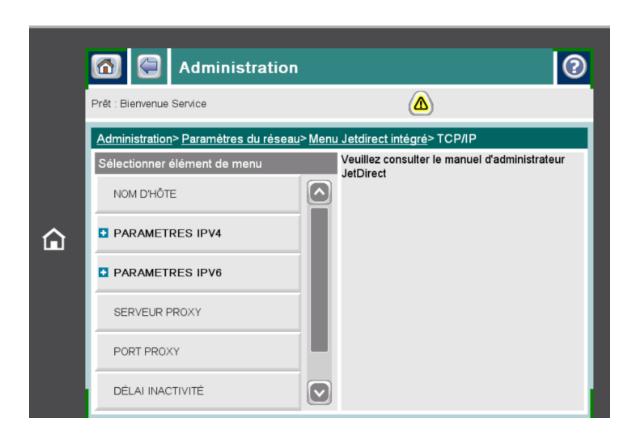

Step 9:

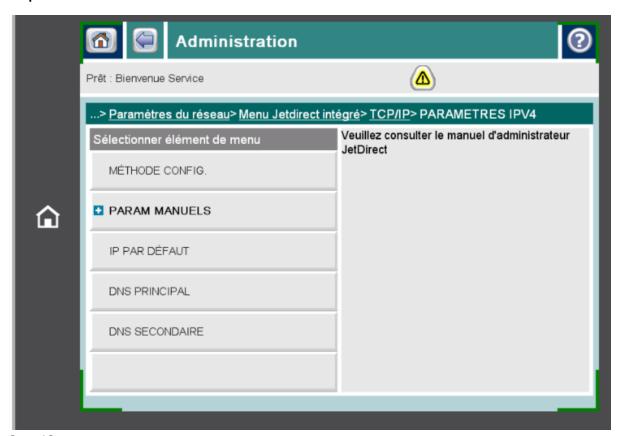

Step 10:

