



# HP Color LaserJet Enterprise CP4020-CP4520 Series Printer



## Change the product configuration settings

- 1. Windows XP, Windows Server 2003, and Windows Server 2008 (using the default Start menu view):**  
Click **Start**, and then click **Printers and Faxes**.  
  
**Windows XP, Windows Server 2003, and Windows Server 2008 (using the Classic Start menu view):**  
Click **Start**, click **Settings**, and then click **Printers**.  
  
**Windows Vista:** Click **Start**, click **Control Panel**, and then in the category for **Hardware and Sound** click **Printer**.  
  
**Windows 7:** Click **Start**, and then click **Devices and Printers**.
- 2. Right-click the driver icon, and then select **Properties** or **Printer properties**.**
- 3. Click the **Device Settings** tab.**