

 


HP Color LaserJet Enterprise CP4020-CP4520 Series Printer




Select page orientation with Windows


1. On the **File** menu in the software program, click **Print**.

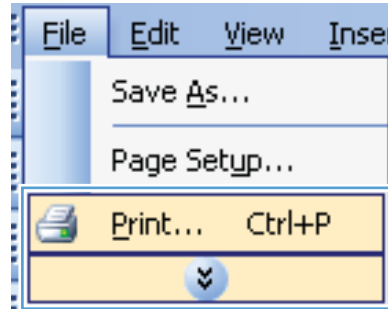

 2. Select the product, and then click the **Properties** or **Preferences** button.

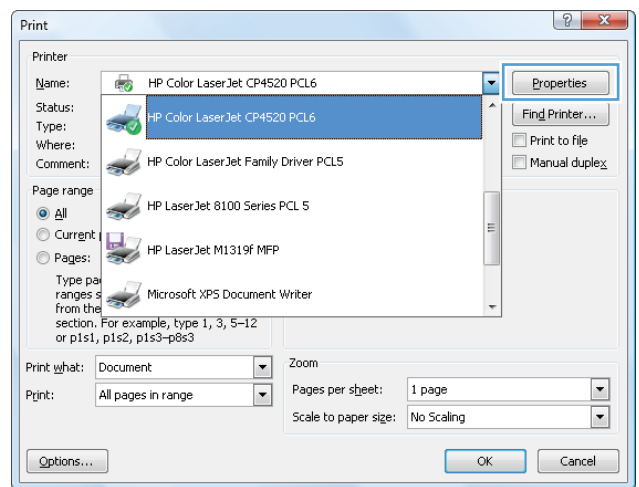

 3. Click the **Finishing** tab.

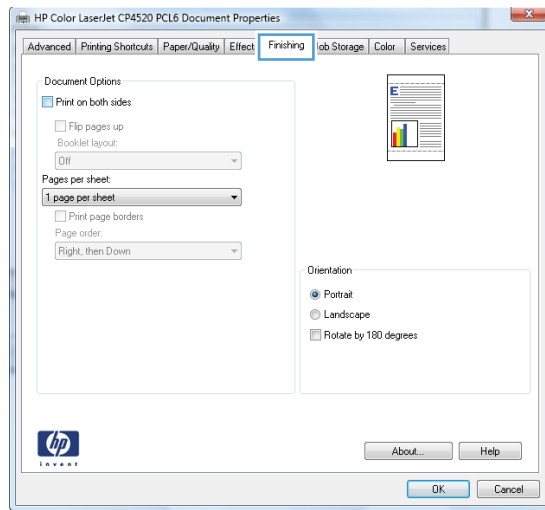

4. In the **Orientation** area, select the **Portrait** or **Landscape** option.

To print the page image upside down, select the **Rotate by 180 degrees** option.

