


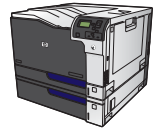

HP LaserJet Enterprise CP5520 Series Printer



Change the product configuration settings

- 1. Windows XP, Windows Server 2003, and Windows Server 2008 (using the default Start menu view):** Click **Start**, and then click **Printers and Faxes**.
Windows XP, Windows Server 2003, and Windows Server 2008 (using the Classic Start menu view): Click **Start**, click **Settings**, and then click **Printers**.
Windows Vista: Click **Start**, click **Control Panel**, and then in the category for **Hardware and Sound** click **Printer**.
Windows 7: Click **Start**, and then click **Devices and Printers**.
- 2.** Right-click the driver icon, and then select **Properties** or **Printer properties**.
- 3.** Click the **Device Settings** tab.