





# HP LaserJet Enterprise CP5520 Series Printer




## Create a stored job with Windows

1. On the **File** menu in the software program, click **Print**.
2. Select the product, and then click the **Properties** or **Preferences** button.

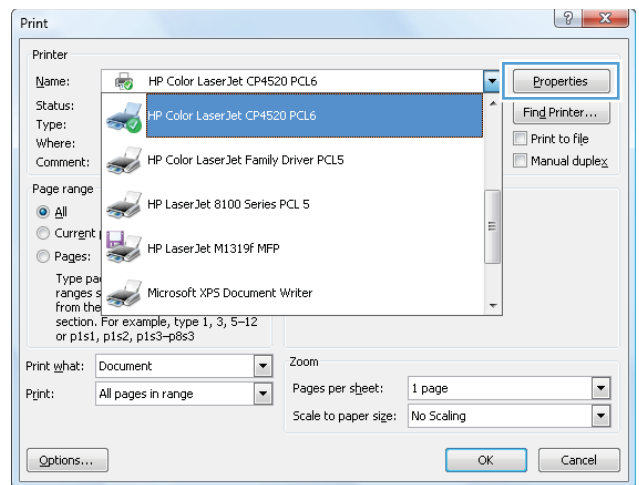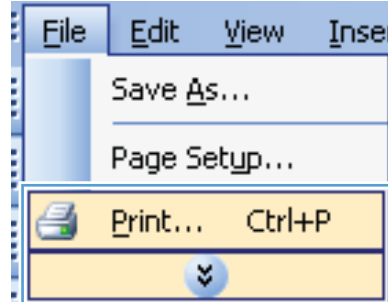

3. Click the **Job Storage** tab.

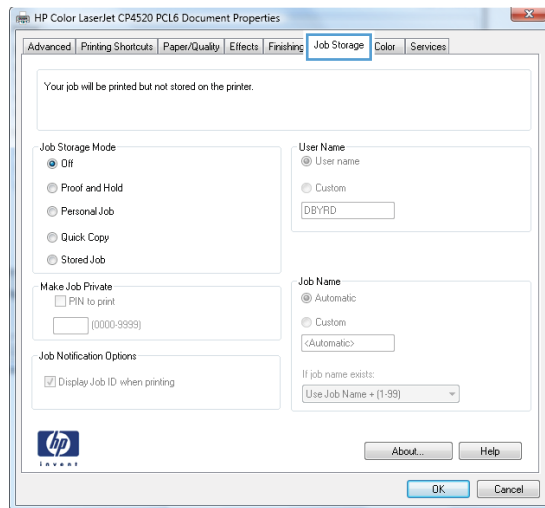

4. Select a **Job Storage Mode** option, and then click the **OK** button.

