



# LaserJet Managed

## MFP E72500, E77800, E82500, E87600 Series

### Power on and off

---

**CAUTION:** To prevent damage to the printer, use only the power cord that is provided with the printer.

**NOTE:** Make sure that the power source is adequate for the printer voltage rating. The voltage rating is on the printer label. The printer uses either 110-127 Vac or 220-240 Vac and 50/60 Hz.

---

A label with the printer voltage rating is located on the back of the printer.

### Turn on the printer

1. Connect the power cord that is provided with the printer to the connection port on the lower-right bottom of the printer.
2. Connect the power cord between the printer and a grounded AC outlet.
3. Move the power switch on the lower-right bottom of the printer into the On position, and then press and release the On/off button on the front of the printer.

### Manage power

The printer includes power-management features that can help reduce power consumption and save energy.

- Sleep Settings put the printer in a reduced power consumption state if it is idle for a specific length of time. The length of time before the product enters Sleep mode can be set on the control panel.

### Set the printer sleep settings

1. From the Home screen on the printer control panel, select [Settings](#).
2. Open the following menus:
  - [General](#)
  - [Energy Settings](#)
3. Select [Sleep Settings](#) or [Sleep Schedule](#).
4. Select the appropriate options, and complete the set up.

### Turn off the printer

Press and release the On/off button on the front of the printer, and then move the power switch on the lower-right bottom of the printer into the Off position.

---

**CAUTION:** Do not turn off the printer if a cartridge is missing. Damage to the printer can result.

---

A warning message displays on the printer control panel if you attempt to turn off the printer when one or more cartridges are missing.