


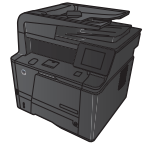

# LASERJET PRO 400 MFP M425 SERIES



## Fax error report printing

Use the following instructions to print fax logs and reports:

### Print all fax reports

Use this procedure to print all of the following reports at one time:

- Last Call Report
  - Fax Activity Log
  - Phone Book Report
  - Junk Fax List
  - Billing Report (when Billing Codes are turned on)
  - Configuration Report
  - Usage Page
1. From the Home screen on the product control panel, touch the [Fax](#) button.
  2. Touch the [Fax Menu](#) button.
  3. Touch the [Fax Reports](#) button.
  4. Touch the [Print All fax Reports](#) button.

### Print individual fax reports

1. From the Home screen on the product control panel, touch the [Fax](#) button.
2. Touch the [Fax Menu](#) button.
3. Touch the [Fax Reports](#) button.
4. Touch the name of the report that you want to print.

## Set the fax error report

A fax error report is a brief report that indicates the product experienced a fax job error. You can set it to print after the following events:

- Every fax error (the factory-set default)
- Send fax error
- Receive fax error
- Never



**NOTE:** With this option, you will have no indication that a fax failed to be transmitted unless you print a fax activity log.

---

1. From the Home screen on the product control panel, touch the [Fax](#) button.
2. Touch the [Fax Menu](#) button.
3. Touch the [Fax Reports](#) button.
4. Touch the [Fax Error Report](#) button, and then touch the printing option that you want to use.