



HP LaserJet Enterprise M4555 MFP Series - Replace the print cartridge

Replace the print cartridge


If toner gets on clothing, wipe it off with a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.

Information about recycling used print cartridges is on the [print-cartridge box](#).

1. Pull the top cover release lever to open the top cover.
1: Location of the print-cartridge door




2. Grasp the handle of the used print cartridge and pull out to remove.
2: Location of the print cartridge

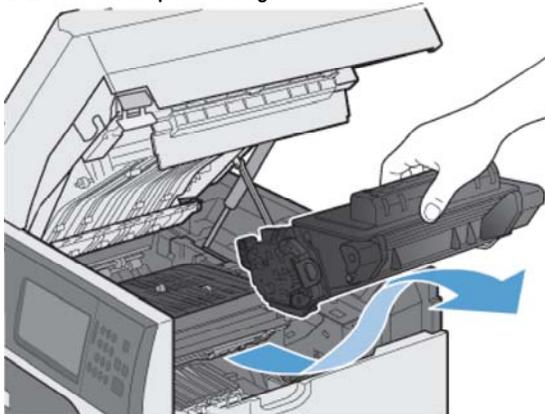


3. Store the used print cartridge in a protective bag. Information about recycling used print cartridges is on the print-cartridge box.
4. Remove the new print cartridge from its protective bag.

Be careful not to damage the memory tag (callout 1) on the print cartridge.

3: Location of the memory tag

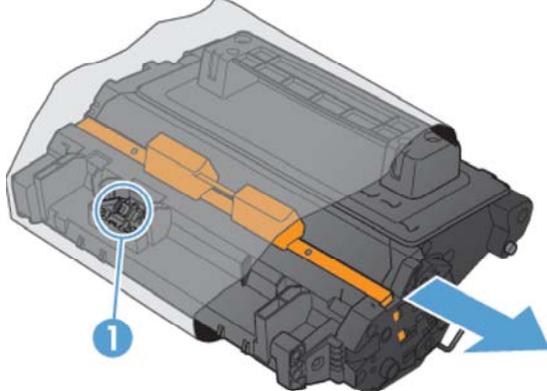


5. Grasp both sides of the print cartridge and distribute the toner by gently rocking the print cartridge five or six times.
- 4: Shake print cartridge**

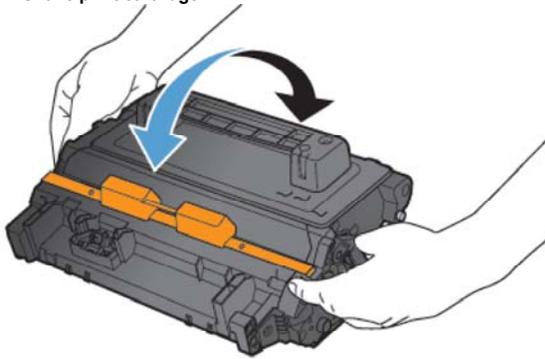

6. Remove the orange, plastic shipping lock from the bottom of the new print cartridge.
- 5: Remove the cartridge shipping lock**




7. Pull on the orange tab to remove the toner sealing tape. Completely remove the sealing tape from the cartridge.
- 6: Location of the protective cover**

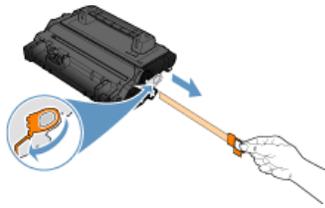

Avoid prolonged exposure to light.

8. Align the print cartridge with its slot and insert the print cartridge until it clicks into place.

7: Location of the print cartridge slot

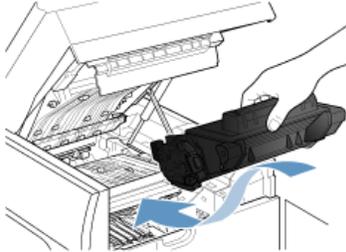

9. Close the top cover.

8: Location of the front door

