



HP LaserJet Enterprise 500 Color MFP M575 and HP LaserJet Enterprise Color flow MFP M575c - Toner cartridges


[Toner cartridge view](#)

[Toner cartridge information](#)

[Replace the toner cartridges](#)

Toner cartridge view

1: Toner cartridge walkaround

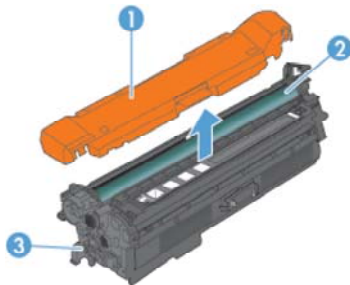

- 1 - Plastic shield
- 2 - Imaging drum

CAUTION: Do not touch the green roller. Doing so can damage the cartridge

- 3 - Memory chip

Toner cartridge information

Color	Cartridge number	Part number
Standard-capacity replacement black toner cartridge	507A	CE400A
High-capacity replacement black toner cartridge	507X	CE400X
Replacement cyan toner cartridge	507A	CE401A
Replacement yellow toner cartridge	507A	CE402A
Replacement magenta toner cartridge	507A	CE403A

Environmental features: Recycle toner cartridges by using the HP Planet Partners return and recycling program.

For more information about supplies, go to www.hp.com/go/learnaboutsupplies.

The information contained herein is subject to change without notice. For the latest supplies information go to www.hp.com/go/lj500colorMFPM575_manuals.

Recycle toner cartridges

To recycle a genuine HP toner cartridge, place the used cartridge in the box in which the new cartridge arrived. Use the enclosed return label to send the used supply to HP for recycling. For complete information, see the recycling guide that is included with each new HP supply item.

Toner-cartridge storage

Do not remove the toner cartridge from its package until you are ready to use it.

To prevent damage to the toner cartridge, do not expose it to light for more than a few minutes. Cover the imaging drum if the toner cartridge must be removed from the product for an extended period of time.

HP policy on non-HP toner cartridges

Hewlett-Packard Company cannot recommend the use of non-HP toner cartridges, either new or remanufactured.

[Any damage caused by a non-HP toner cartridge is not covered under the HP warranty and service agreements.](#)

Replace the toner cartridges

The product uses four colors and has a different toner cartridge for each color: black (K), magenta (M), cyan (C), and yellow (Y).

If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.

Information about recycling used toner cartridges is on the toner cartridge box.


1. Open the front door. Make sure that the door is completely open.
2: Location of the front door




2. Grasp the handle of the used toner cartridge and pull out to remove.
3: Location of the toner cartridge




3. Remove the new toner cartridge from its protective bag.
4: Location of the memory tag

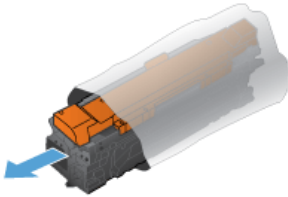

4. Grasp both sides of the toner cartridge and distribute the toner by gently rocking the toner cartridge.
5: Shake the toner cartridge

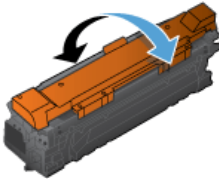


5. Remove the plastic shield from the toner cartridge.
6: Location of the protective cover

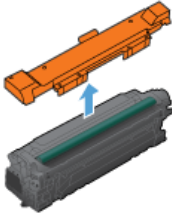

Avoid prolonged exposure to light.

Do not touch the green roller. Doing so can damage the cartridge.

6. Align the toner cartridge with its slot and insert the toner cartridge until it clicks into place.
7: Location of the toner cartridge slot

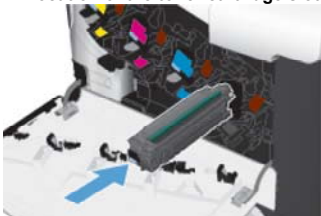

7. Close the front door.
8: Location of the front door

