



LaserJet Enterprise MFP, PageWide Enterprise MFP


Reduce or enlarge a copy image

 **NOTE:** The steps vary according to the type of control panel.

FutureSmart 3



FutureSmart 4

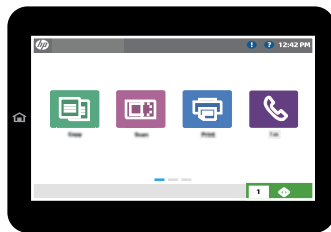

FutureSmart 3

1. From the Home screen on the product control panel, select the [Copy](#) button.
2. Select the [Reduce/Enlarge](#) button.
3. Select one of the predefined percentages, or select the [Scaling](#) field and type a percentage. Use a percentage between 25 and 200 when using the document feeder or between 25 and 400 when copying from the scanner glass. Select the [OK](#) button. You can also select these options:
 - [Auto](#): The printer automatically scales the image to fit the paper size in the tray.
 - [Auto Include Margins](#): The printer reduces the image slightly to fit the entire scanned image within the printable area on the page.

 **NOTE:** To reduce the image, select a scaling percentage that is less than 100. To enlarge the image, select a scaling percentage that is greater than 100.


4. Select the Start  button.

FutureSmart 4

1. From the Home screen on the product control panel, select [Copy](#).



2. Select [Options](#) in the lower left corner, and then select [Reduce/Enlarge](#) in the list of options.
3. Select [Automatic](#), or select [Manual](#) and type a percentage between 25 and 400. Select [Done](#).

 **NOTE:** To reduce the image, select a scaling percentage that is less than 100. To enlarge the image, select a scaling percentage that is greater than 100.

4. To adjust the number of copies, select the box to the left of the [Copy](#) button, and then select the number of copies from the keypad that opens.
5. Select [Copy](#).