 





HP LaserJet Enterprise 700 M712

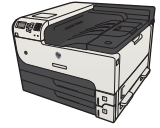


Select the page orientation (Windows)

 1. From the software program, select the **Print** option.
2. Select the product, and then click the **Properties** or **Preferences** button.

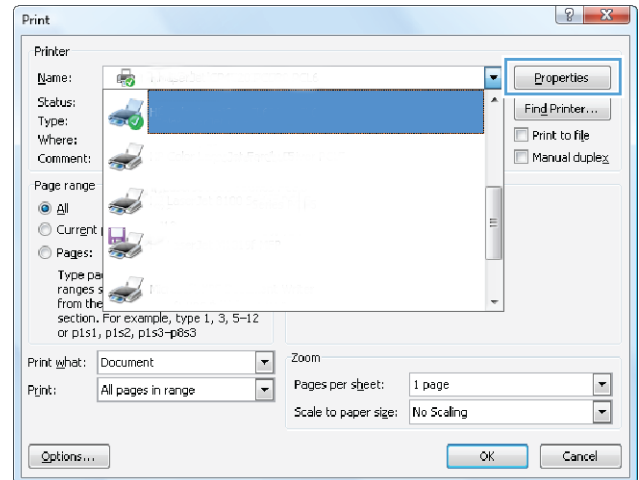

 
3. Click the **Finishing** tab.

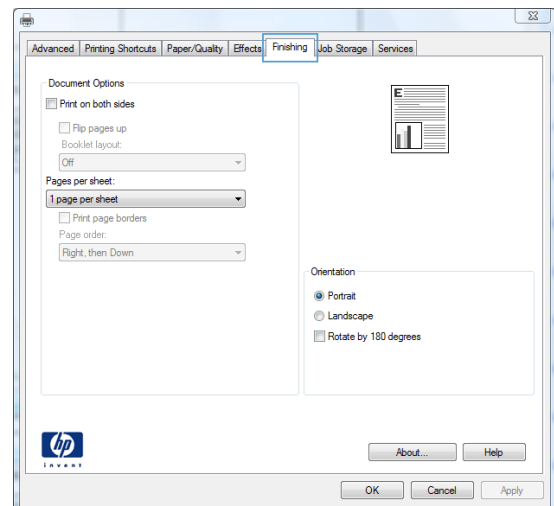

4. In the **Orientation** area, select the **Portrait** or **Landscape** option.

To print the page image upside down, select the **Rotate by 180 degrees** option.

 Click the **OK** button to close the **Document Properties** dialog box.

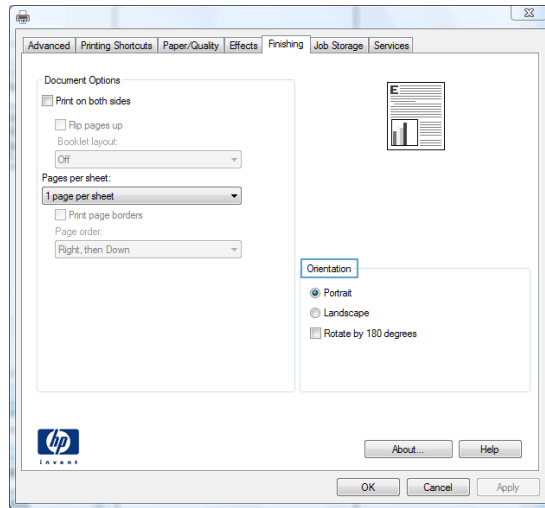

5. In the **Print** dialog box, click the **OK** button to print the job.

