




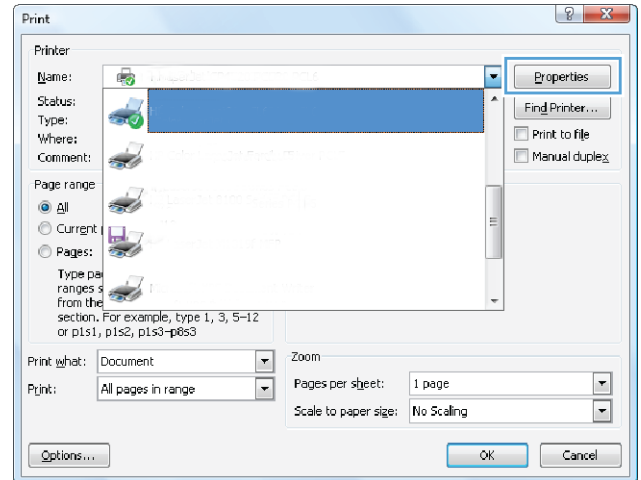 
# HP LaserJet Enterprise MFP M725




## Manually print on both sides (Windows)

 **NOTE:** Follow these steps to print on both sides of a paper size or type that is not supported by the automatic duplexer.


1. From the software program, select the **Print** option.
2. Select the product, and then click the **Properties** or **Preferences** button.



 
3. Click the **Finishing** tab.

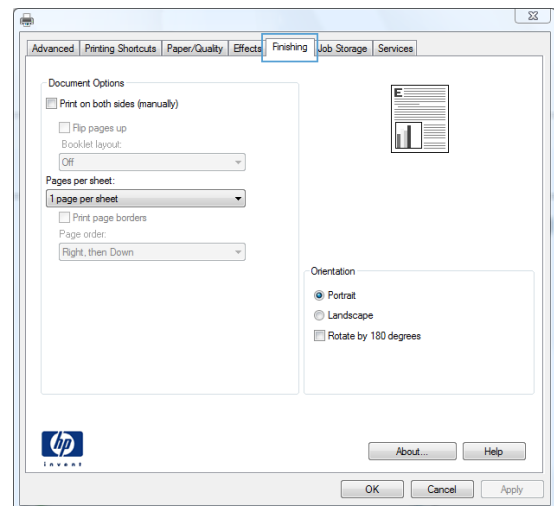

 4. Select the **Print on both sides (manually)** check box. Click the **OK** button to print the first side of the job.

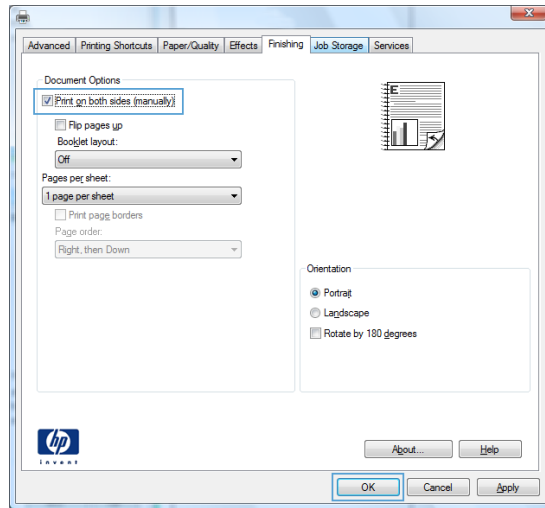

 5. Retrieve the printed stack from the output bin, and place it with the printed-side facing down in Tray 1.

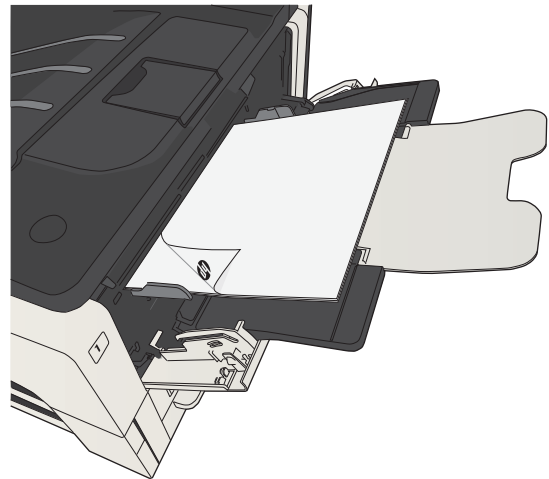

6. If prompted, touch the appropriate control-panel button to continue.