



HP LaserJet Enterprise flow MFP M830 - Replace the toner cartridge

Replace the toner cartridge


When a toner cartridge approaches the end of useful life, you are prompted to order a replacement. You can continue printing with the current cartridge until redistributing the toner no longer yields acceptable print quality.

Toner cartridge part number: CF325X

The following illustration shows the toner-cartridge components.

Toner cartridge components, back view

1: Toner cartridge components, back view

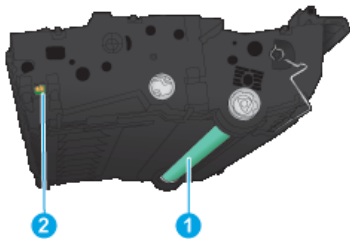

1 - Imaging drum Do not touch the green roller. Doing so can damage the cartridge.

2 - Memory chip

If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.

[Information about recycling used toner cartridges is on the toner cartridge box.](#)


1. Open the front door. Make sure that the door is completely open.

2: Open the door




2. Push the button on the lever, and then rotate the toner-cartridge lever to the down position.

3: Release the toner-cartridge lever

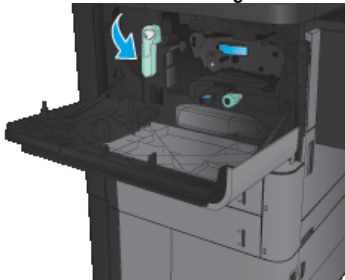

3. Grasp the handle of the used toner cartridge and pull out to remove it.

4: Remove the toner cartridge

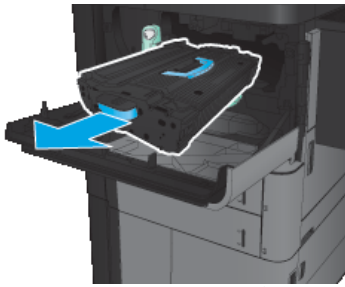


- 4. Remove the new toner cartridge from its protective bag.

5: New toner cartridge




- 5. Align the toner cartridge with its slot, and then insert the toner cartridge into the product. The toner cartridge will drop slightly when it is in place.

6: Install the toner cartridge

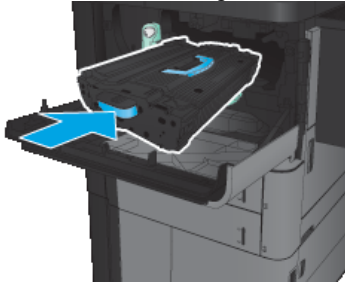

- 6. Push the button on the lever, and then rotate the toner-cartridge lever to the up position.

7: Lock the toner-cartridge lever

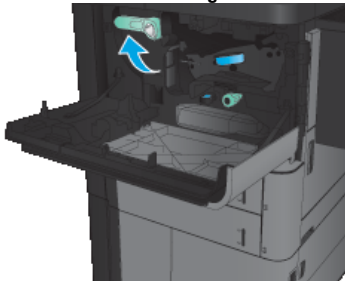

- 7. Close the front door.

8: Close the door

