


HP LaserJet P3010 Series – Print tasks




Use features in the Windows driver

How do I?	Steps to perform
<p data-bbox="94 375 420 406">Open the printer driver</p> <p data-bbox="94 654 535 686">Get help for any printing option</p>	<p data-bbox="714 343 1291 422">On the File menu in the software program, click Print. Select the printer, and then click Properties or Preferences.</p> <p data-bbox="714 630 1312 734">Click the ? symbol in the upper-right corner of the printer driver, and then click any item in the printer driver. A pop-up message displays that provides information about the item. Or, click Help to open the online Help.</p> 

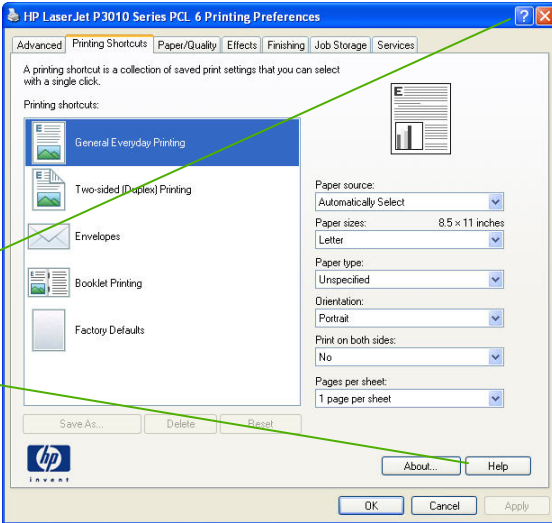





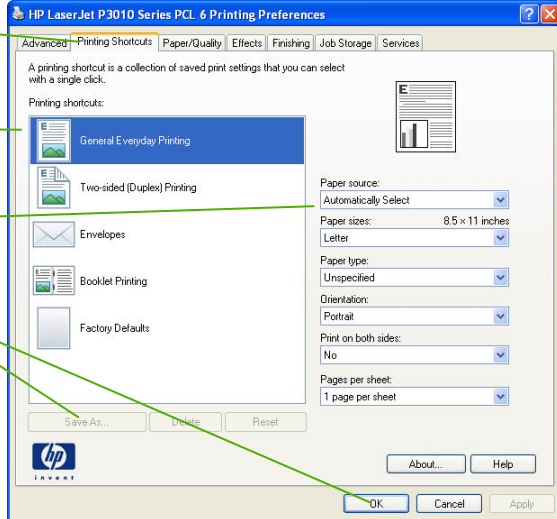

How do I?	Steps to perform	
<p data-bbox="92 300 453 331">Create a printing shortcut</p> <p data-bbox="92 435 684 544">NOTE: Always select a shortcut before adjusting any of the settings on the right side of the screen. If you adjust the settings and then select a shortcut, all your adjustments are lost.</p>	<ol data-bbox="716 284 1270 627" style="list-style-type: none">1 Open the printer driver and click the Printing Shortcuts tab.2 Select an existing shortcut as a base.3 Select the print options for the new shortcut.4 Click Save As, type a name for the shortcut, and click OK.	




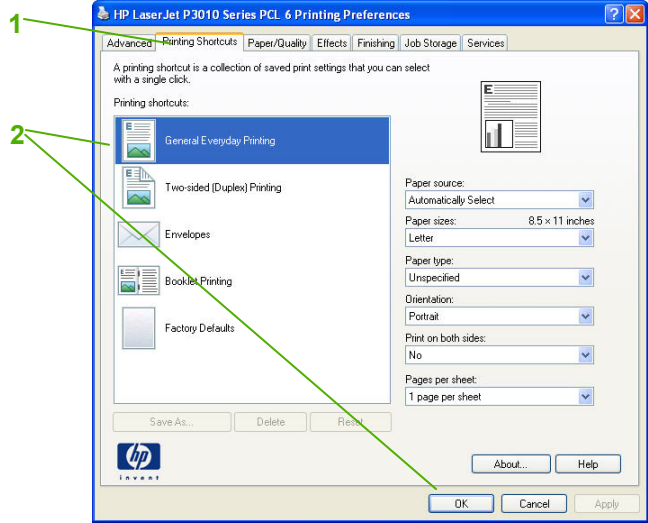


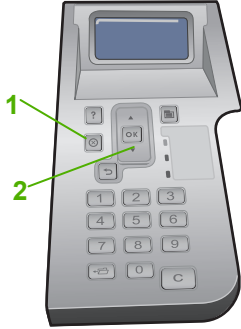How do I?	Steps to perform
<p data-bbox="92 300 420 335">Use a printing shortcut</p> <p data-bbox="92 435 684 544">NOTE: Always select a shortcut before adjusting any of the settings on the right side of the screen. If you adjust the settings and then select a shortcut, all your adjustments are lost.</p>	<ol data-bbox="716 272 1318 416" style="list-style-type: none">1 Open the printer driver and click the Printing Shortcuts tab.2 Select one of the shortcuts, and then click OK to print the job with the predefined settings. 
<p data-bbox="92 959 688 1029">Cancel a print job from the product control panel</p>	<ol data-bbox="716 932 1276 1236" style="list-style-type: none">1 Press the stop button  on the control panel.2 Press the down arrow  to highlight the CANCEL CURRENT JOB option, and then press the OK button. 





Select output options

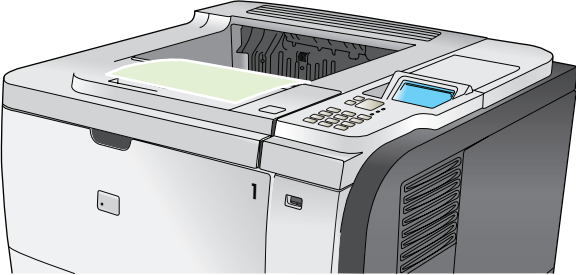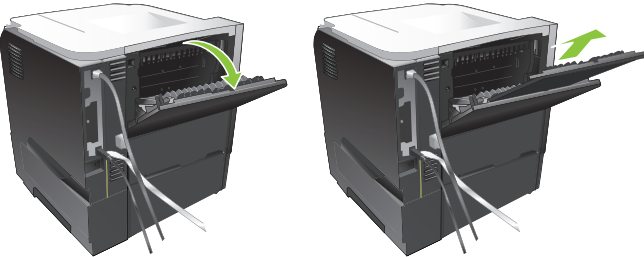How do I?	Steps to perform
<p>Print to the top (standard) output bin</p>	<p>The top output bin collects paper face-down, in the correct order. The top output bin should be used for most print jobs, including transparencies.</p> <p>To use the top output bin, be sure that the rear output bin is closed. To avoid jams, do not open or close the rear output bin while the product is printing.</p> 
<p>Print to the rear output bin</p>	<p>The product always prints to the rear output bin if it is open. Paper that is printed to this bin will exit faceup, with the last page on top (reverse order).</p> <p>Printing from Tray 1 to the rear output bin provides the straightest path. Opening the rear output bin might improve performance with the following items:</p> <ul style="list-style-type: none">• Envelopes• Labels• Small custom-size paper• Postcards• Paper heavier than 120 g/m² (32 lb) <p>To open the rear output bin, grasp the handle at the top of the bin. Pull the bin down to a 45° angle, and slide out the extension.</p> <p>Opening the rear output bin makes the duplexer and the top output bin unavailable. To avoid jams, do not open or close the rear output bin while the product is printing.</p> 





Print on both sides (duplex)

 
 
 
How do I?

Manually print on both sides (duplex)

NOTE: This information applies to products that do not have an automatic duplexer.

Steps to perform

- 1 Load paper face-up in Tray 1 or face-down in Tray 2.
- 2 In the printer driver, select the **Print on both sides (manually)** check box. If you will bind the document along the top edge, select the **Flip pages up** check box.
- 3 Click the **OK** button to print the first side of the job.
- 4 Retrieve the printed stack from the output bin, and place it with the printed-side facing down in Tray 1 or facing up in Tray 2.

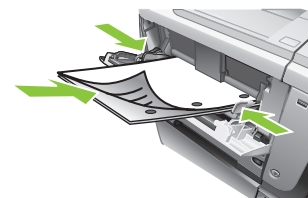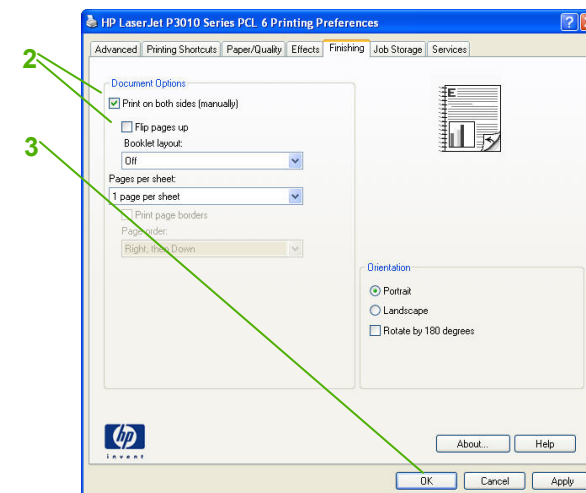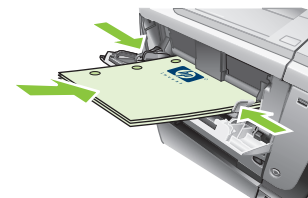



 
- 5 Press the **OK** button to print the second side of the job.



 
Automatically print on both sides (duplex)

NOTE: This information applies to products that have an automatic duplexer.

- 1 Load paper face-up in Tray 2.

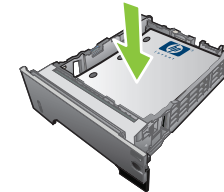

- 2 In the printer driver, select the **Print on both sides** check box. If you will bind the document along the top edge, select the **Flip pages up** check box.
- 3 Click the **OK** button to print the job.

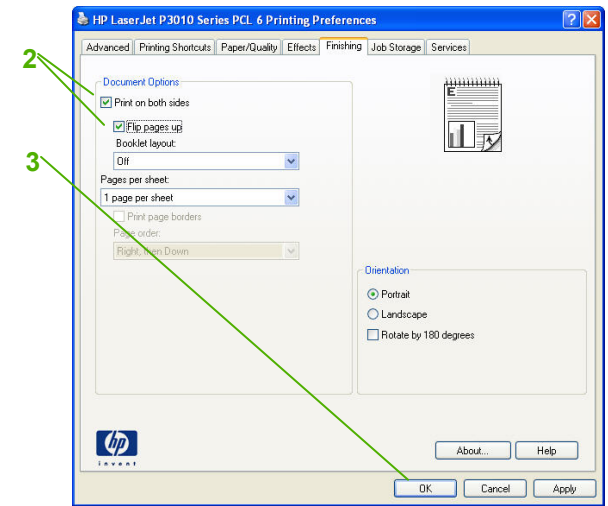

HP LaserJet P3010 Series – Print tasks



 
Print multiple pages per sheet

How do I?

Print multiple pages per sheet


Steps to perform

- 1 Open the printer driver and click the **Finishing** tab.
- 2 Select the number of pages per sheet from the **Pages per sheet** drop-down list.
- 3 Select the correct options for **Print page borders**, **Page order**, and **Orientation**.

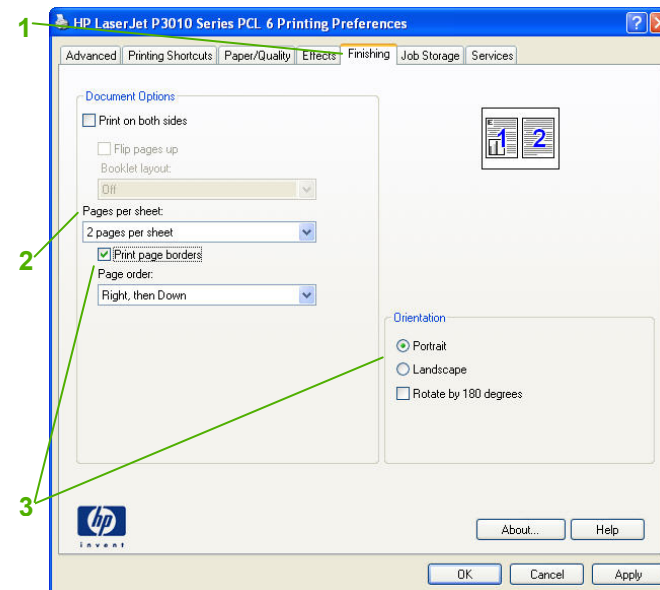




Select page orientation

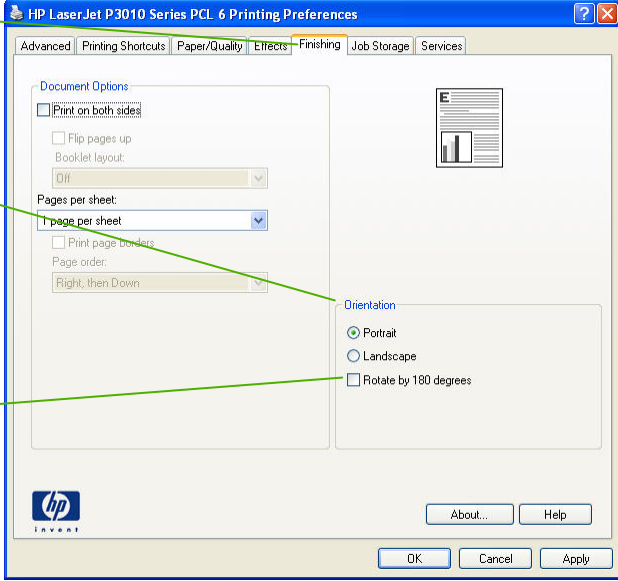How do I?	Steps to perform
<p>Select page orientation</p>	<ol style="list-style-type: none"><li data-bbox="716 316 1323 343">1 Open the printer driver and click the Finishing tab.<li data-bbox="716 515 1323 571">2 In the Orientation area, select the Portrait or Landscape option.<li data-bbox="716 715 1323 770">3 To print the page image upside down, select the Rotate by 180 degrees option. 






Print a booklet

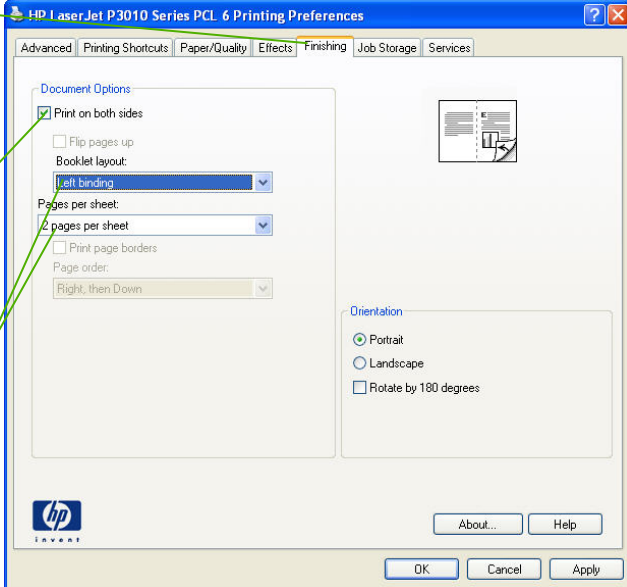How do I?	Steps to perform
Print a booklet	<ol style="list-style-type: none"><li data-bbox="716 316 1291 343">1 Open the printer driver and click the Finishing tab.<li data-bbox="716 491 1207 518">2 Select the Print on both sides check box.<li data-bbox="716 667 1291 726">3 In the Booklet layout drop-down list, click the Left binding or Right binding option. <p data-bbox="751 758 1291 817">The Pages per sheet option automatically changes to 2 pages per sheet.</p> 









Print on different page sizes

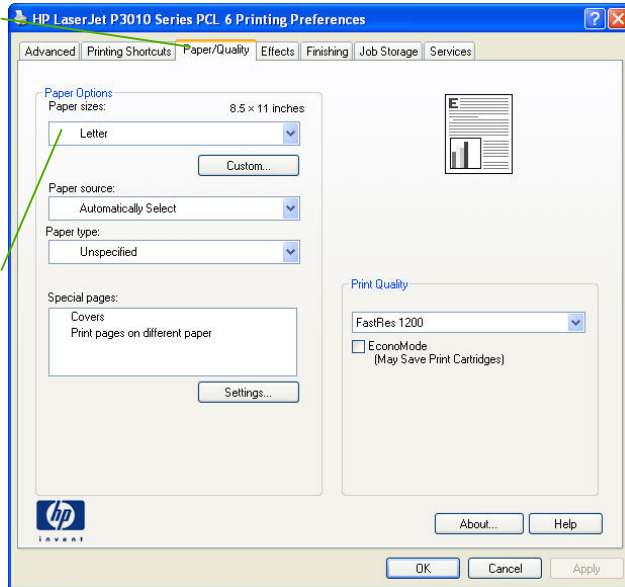How do I?	Steps to perform
<p data-bbox="94 343 493 375">Print on different page sizes</p> <p data-bbox="94 406 357 438">Select a page size</p>	<ol data-bbox="735 311 1312 622" style="list-style-type: none"><li data-bbox="735 311 1312 367">1 Open the printer driver and click the Paper/Quality tab.<li data-bbox="735 590 1312 622">2 Select a size from the Paper sizes drop-down list. 





Print on pre-printed letterhead and forms

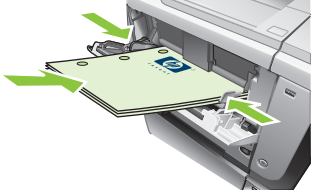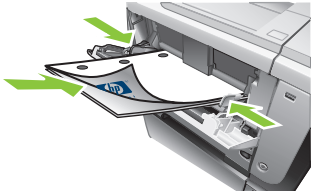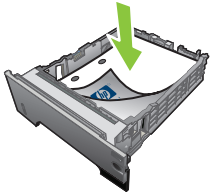 
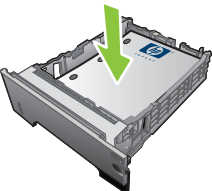 
How do I?	Steps to perform
<p>Load trays</p> <ul style="list-style-type: none">• Use only letterhead or forms approved for use in laser printers.• Do not use raised or metallic letterhead.	<p>Tray 1 Single-sided printing</p> <ul style="list-style-type: none">• Face-up• Top edge leading into the product <p>Tray 1 Automatic duplex printing</p> <ul style="list-style-type: none">• Face-down• Bottom edge leading into the product <p>Tray 2 Single-sided printing</p> <ul style="list-style-type: none">• Face-down• Top edge at the front of the tray <p>Tray 2 Automatic duplex printing</p> <ul style="list-style-type: none">• Face-up• Bottom edge at the front of the tray    





Print on pre-printed letterhead and forms

- 1 Open the printer driver and click the **Paper/Quality** tab.
- 2 From the **Paper type** drop-down list, click **More . . .**
- 3 Expand the options for **Type is:**. Expand the category of paper types that best describes your paper, and then click the paper type that you are using.

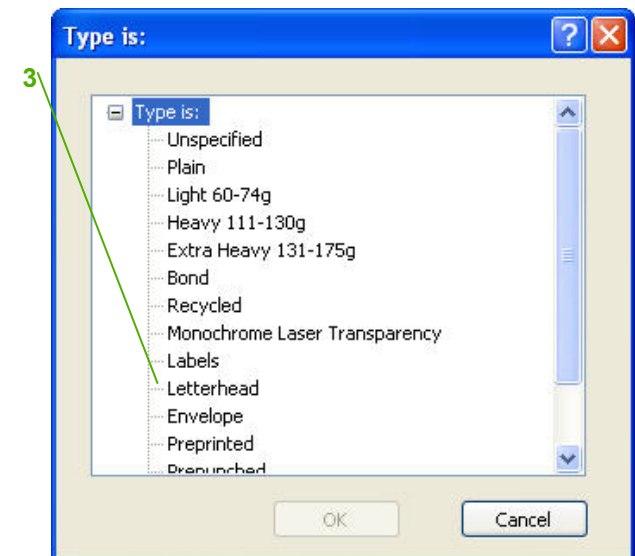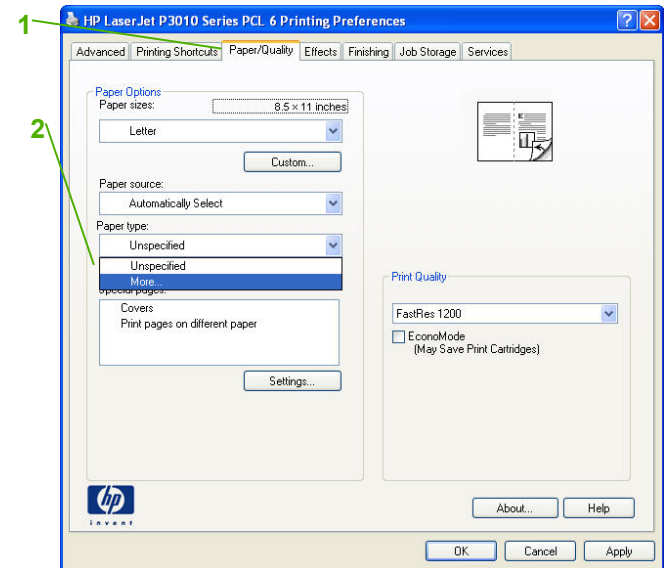



Print on special paper, labels, or transparencies

How do I?

Load trays

 
- Use only labels that have no exposed backing between them.
- Use labels that lie flat.
- Use only full sheets of labels.
- Use only transparencies that are approved for use in laser printers.
- Place transparencies on a flat surface after removing them from the product.

Print on special paper, labels, or transparencies

Steps to perform

 
Tray 1 Single-sided printing

- Face-up
- Top edge leading into the product

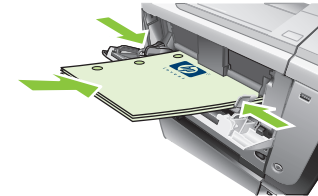

 
1 Open the printer driver and click the **Paper/Quality** tab.

2 From the **Paper type** drop-down list, click **More . . .**

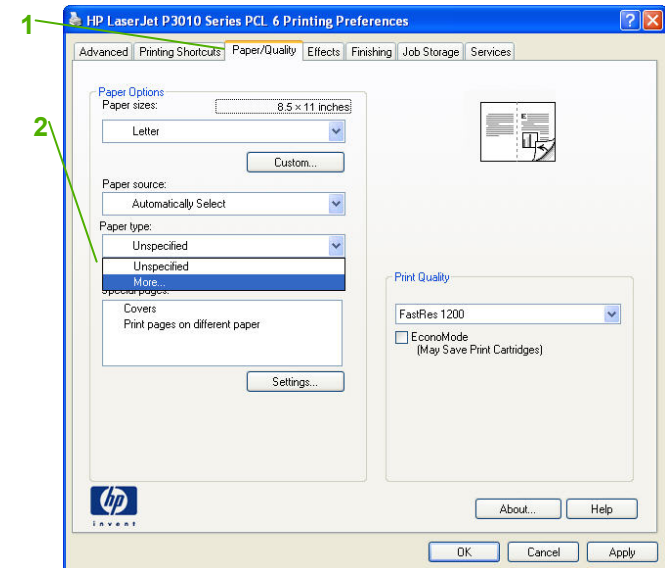



 
 
How do I?	Steps to perform
	<p>3 Expand the options for Type is:. Expand the category of paper types that best describes your paper, and then click the paper type that you are using.</p>

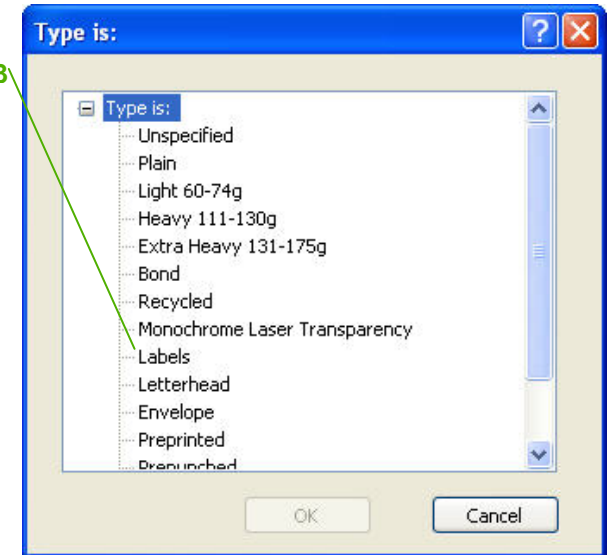





Print a different first or last page

How do I?	Steps to perform
<p>Print the first or last page on different paper</p> <p>Print covers on different paper</p>	<ol style="list-style-type: none"> 1 Open the printer driver and click the Paper/Quality tab. 2 In the Special pages area, click Covers or Print pages on different paper, and then click Settings. 3 Select an option to print a blank or preprinted front cover, back cover, or both. Or, select an option to print the first or last page on different paper. 4 Select options from the Paper source and Paper type drop-down lists, and then click Add. 5 Click OK.

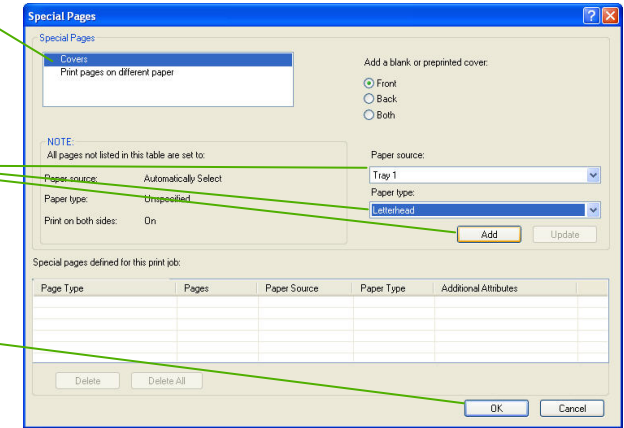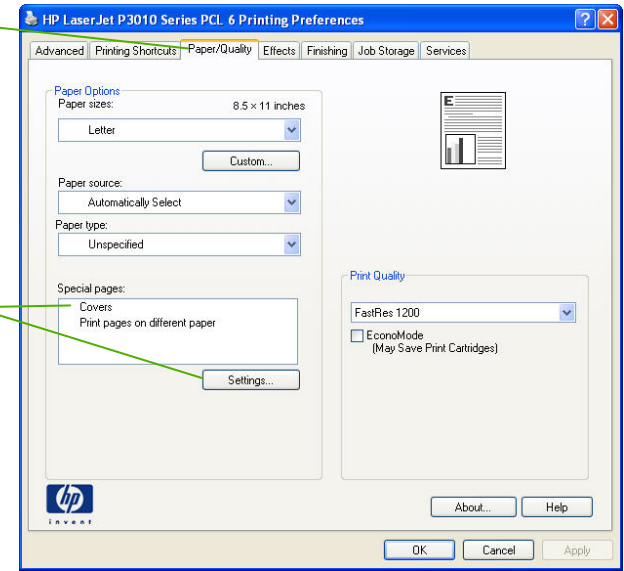



Store a print job

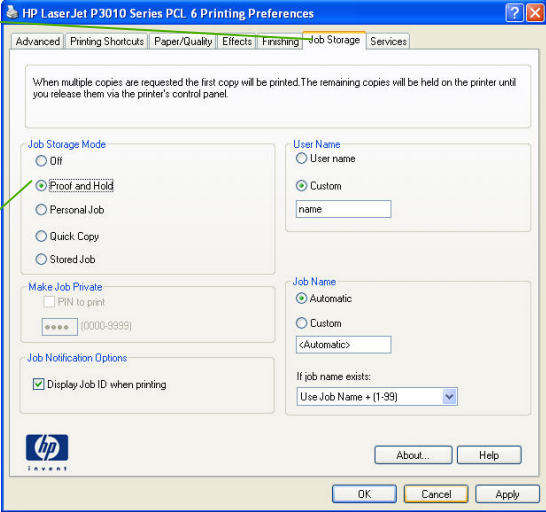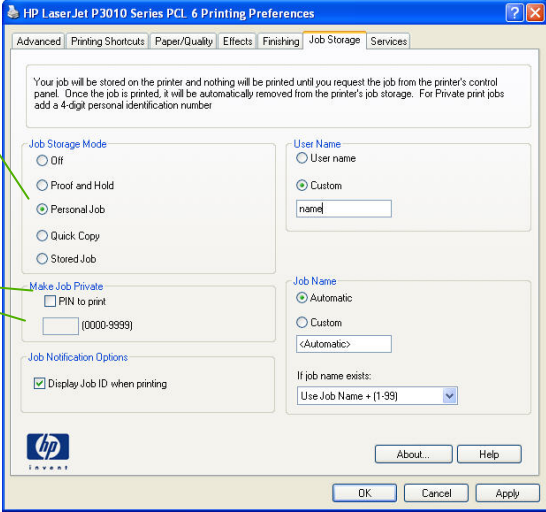How do I?	Steps to perform
<p>Set job storage options</p> <p>Print on copy for proof before printing all the copies</p>	<ol style="list-style-type: none"> <li data-bbox="625 316 1302 343">1 Open the printer driver and click the Job Storage tab. <li data-bbox="625 592 1302 699">2 In the Job Storage Mode area, click Proof and Hold. The product prints the first copy only. A message appears on the product control panel that prompts you to print the rest of the copies. 
<p>Temporarily store a personal job on the product and print it later</p>	<ol style="list-style-type: none"> <li data-bbox="625 871 1302 898">1 In the Job Storage Mode area, click Personal Job. <li data-bbox="625 1147 1302 1201">2 Optional: In the Make Job Private area, click PIN to print, and enter a 4-digit personal identification number (PIN). 



 


How do I?	Steps to perform	
<p>Temporarily store a job on the product</p>	<p>In the Job Storage Mode area, click Quick Copy. One copy of the job is printed immediately, but you can print more copies from the product control panel.</p> <p>NOTE: These jobs are deleted if the product is turned off.</p>	
<p>Permanently store a job on the product</p> <p>Make a permanently stored job private so that anyone who tries to print it must provide a PIN</p> <p>Receive notification when someone prints a stored job</p>	<p>In the Job Storage Mode area, click Stored Job.</p> <ol style="list-style-type: none"> In the Job Storage Mode area, click Stored Job. In the Make Job Private area, click PIN to print, and then enter a 4-digit personal identification number (PIN). <p>In the Job Notification Options area, click Display Job ID when printing.</p>	





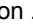
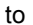





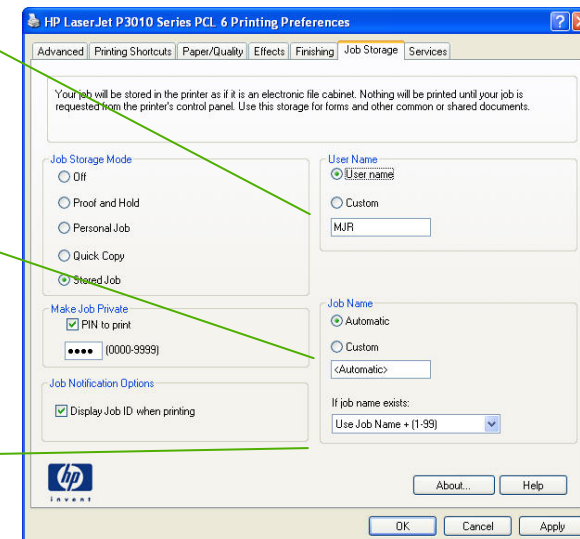



How do I?	Steps to perform
<p data-bbox="92 300 537 331">Set the user name for a stored job</p> <p data-bbox="92 518 525 550">Specify a name for the stored job</p>	<p data-bbox="659 272 1310 352">In the User Name area, click User name to use the Windows default user name. To provide a different user name, click Custom and type the name.</p> <ol data-bbox="625 491 1310 820" style="list-style-type: none"><li data-bbox="625 491 1310 571">1 In the Job Name area, click Automatic to use the default job name. To specify a job name, click Custom and type the name.<li data-bbox="625 711 1310 820">2 Select an option from the If job name exists dropdown list. Select Use Job Name + (1-99) to add a number to the end of the existing name, or select Replace Existing File to overwrite a job that already has that name.

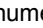

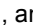


Retrieve a stored print job

How do I?	Steps to perform
<p>Print a stored job</p>	<ol style="list-style-type: none">1 If the product has a numeric keypad, press the folder button  to open the RETRIEVE JOB menu. -or- Press the Menu  button . Press the down arrow  to highlight the RETRIEVE JOB menu, and then press the OK button.2 Press the down arrow  to highlight your user name, and then press the OK button.3 Press the down arrow  to highlight a job name, and then press the OK button. The PRINT or PRINT AND DELETE option is highlighted.4 Press the OK button to select the PRINT or PRINT AND DELETE option.5 If the job requires a PIN, use the numeric keypad, or press the up arrow  or the down arrow  to enter the PIN, and then press the OK button. NOTE: If you use the up arrow  or the down arrow  to enter the PIN, press the OK button after each digit.6 To print the number of copies specified in the driver when the job was stored, press the OK button. -or- To print a different number of copies than you specified in the driver when you stored the job, use the numeric keypad, or press the up arrow  or the down arrow  to select the number of copies, and then press the OK button.





Select layout options

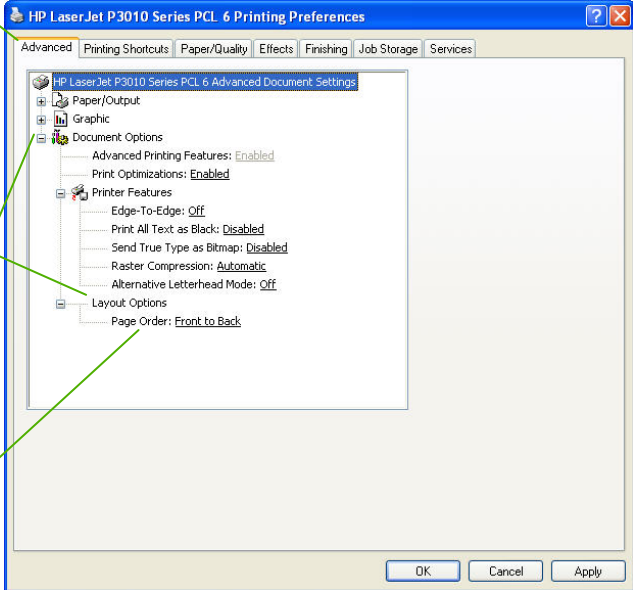
How do I?	Steps to perform
<p>Change the order in which pages are printed</p>	<ol style="list-style-type: none"><li data-bbox="716 316 1318 347">1 Open the driver and click the Advanced tab.<li data-bbox="716 547 1318 611">2 Open the Document Options section, and then open the Layout Options section.<li data-bbox="716 783 1318 895">3 In the Page order drop-down list, select Front to Back or Back to Front to print the pages in the same order as they are in the document, or select Back to Front to print the pages in the reverse order. 



HP LaserJet P3010 Series – Print tasks





Select advanced printing options

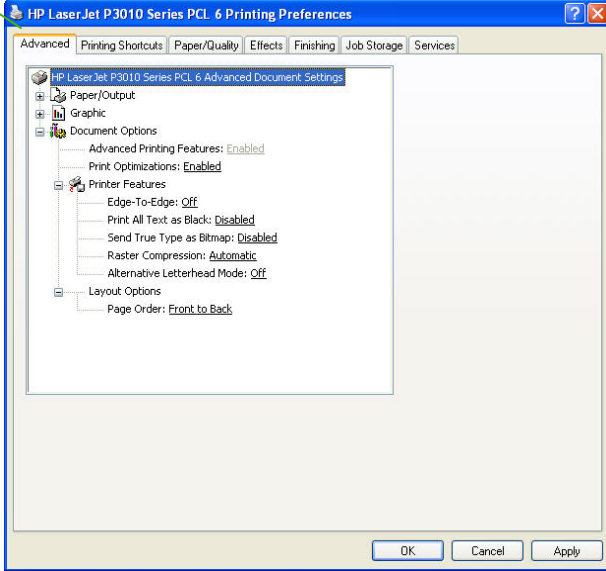How do I?	Steps to perform
Select advanced printing options	<ol style="list-style-type: none"><li data-bbox="716 316 1312 343">1 Open the printer driver and click the Advanced tab.<li data-bbox="716 416 1249 496">2 In any of the sections, click a current setting to activate a dropdown list so you can change the setting. 





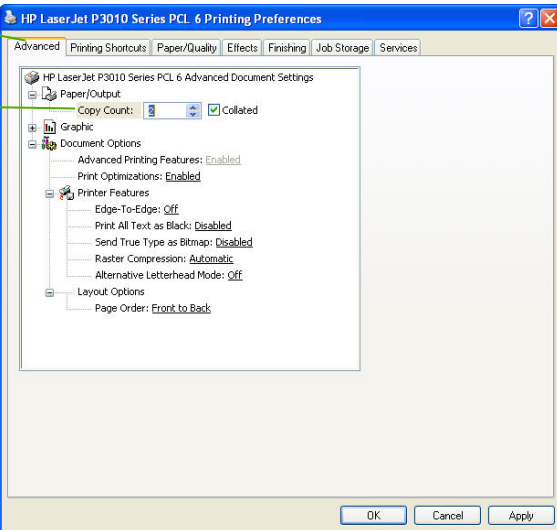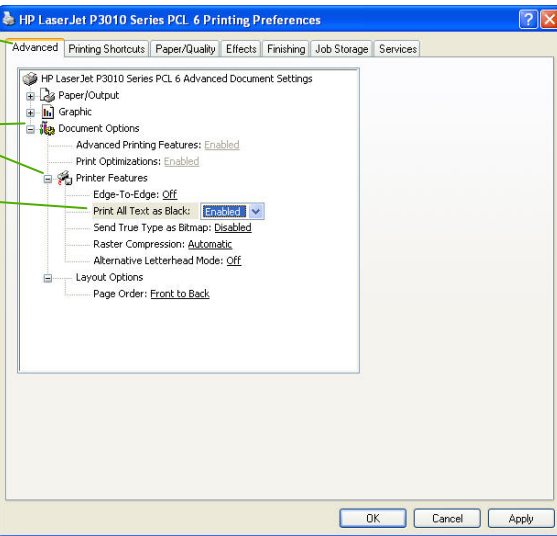



How do I?	Steps to perform
<p>Change the number of copies that are printed</p>	<ol style="list-style-type: none">1 Open the printer driver and click the Advanced tab.2 Open the Paper/Output section, and then enter the number of copies to print. If you select 2 or more copies, you can select the option to collate the pages. NOTE: If the software program that you are using does not provide a way to print a particular number of copies, you can change the number of copies in the driver. Changing this setting affects the number of copies for all print jobs. After your job has printed, restore this setting to the original value. 
<p>Print colored text as black</p>	<ol style="list-style-type: none">1 Open the printer driver and click the Advanced tab.2 Open the Document Options section, and then open the Printer Features section.3 In the Print All Text as Black drop-down list, select Enabled. 



Set sleep mode

How do I?	Steps to perform
<p>Disable or enable sleep mode</p> <p>The adjustable sleep mode feature reduces power consumption when the product has been inactive for an extended period.</p>	<ol style="list-style-type: none">1 Press the Menu button .2 Open each of the following menus. Press the down arrow ▼ to highlight it and then press the OK button to select it.<ol style="list-style-type: none">a. CONFIGURE DEVICEb. RESETSc. SLEEP MODE3 Press the up arrow or down arrow ▲/▼ to select the ON or OFF setting, and then press the OK button.4 Press the Menu button .
<p>Set sleep delay</p> <p>You can set the length of time before the product enters sleep mode. The default setting is 30 MINUTES.</p>	<ol style="list-style-type: none">1 Press the Menu button .2 Open each of the following menus. Press the down arrow ▼ to highlight it and then press the OK button to select it.<ol style="list-style-type: none">a. CONFIGURE DEVICEb. SYSTEM SETUPc. SLEEP DELAY3 Press the up arrow or down arrow ▲/▼ to select the appropriate time period, and then press the OK button.4 Press the Menu button .

