
Overview

This includes the offset function that outputs sorted paper while staggering each set of paper and the staple sort function that staples each set of prints. Installing an optional hole punch module allows you to punch holes in printed paper.

Function names

Tap the name to make its details pop up.

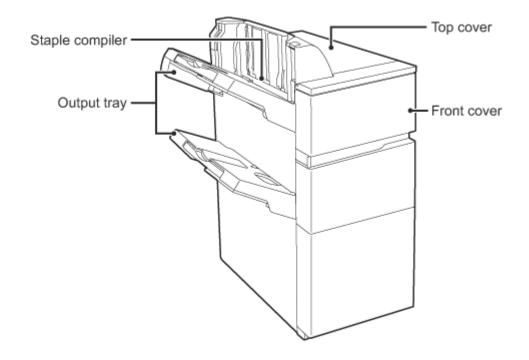




- Do not place heavy objects on the finisher or press down on the finisher (50-sheet stapling).
- Exercise caution when you turn on the power and when printing is taking place, as the tray may move up and down.
- A finisher (50-sheet stapling) cannot be installed simultaneously with a saddle finisher.

Supplies

The finisher (50-sheet stapling) requires the following staple cartridge:

Staple cartridge (approx. 5000 staples per cartridge × three cartridges) AR-SC2

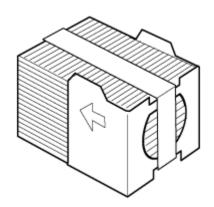


Replacing the cartridge

When the staple cartridge runs out of staples, a message will appear in the operation panel. Follow the operation procedure to replace the staple cartridge.




Open the front cover

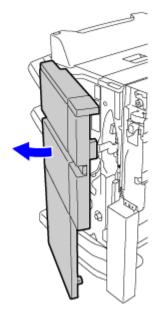

2. 🕝


Squeeze the green parts of the staple case and pull the case up and then out

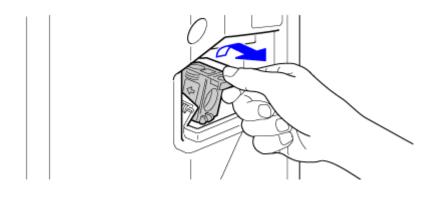

3.

Remove the empty staple cartridge

Press the lock button to release the staple case cover and then remove the staple cartridge.

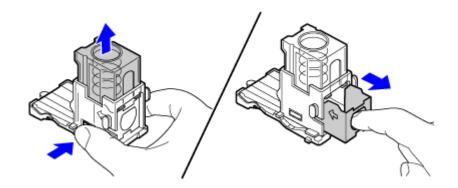


When staples remain, the staple cartridge cannot be removed.



Insert a new staple cartridge into the staple case


Push the staple cartridge in until it clicks into place.

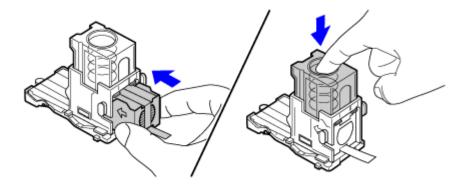

Do not remove the seal from the cartridge before inserting the cartridge into the case.




Pull the seal that holds the staples straight out

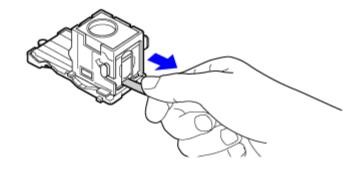




Push the staple case firmly back in

Push the staple case in until it clicks into place.

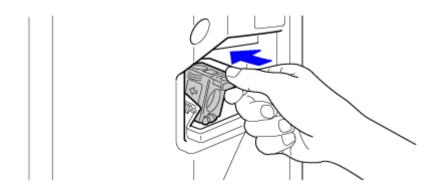

7.

Close the front cover

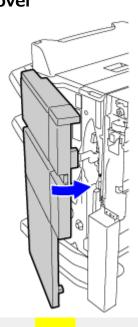

Make a proof copy in staple sort function to verify that stapling takes place correctly.