



HP Support Center

**HP**

## **LaserJet Enterprise MFP - Optimize copy quality for text or pictures**

### **Optimize copy quality for text or pictures**

Optimize the copy job for the type of image being copied: text, graphics, or photos.

1. From the Home screen on the product control panel, touch the **Copy** button.
2. Touch the **More Options** button, and then touch the **Optimize Text/Picture** button.
3. Select one of the predefined options, or touch the **Manually adjust** button and then adjust the slider in the **Optimize For** area. Touch the **OK** button.
4. Touch the **Start**  button.

---

These settings are temporary. After you have finished the job, the product returns to the default settings.

---